 


# DAP

## USER MANUAL

ENGLISH

V1.0



# PA-5500SA

Product code: D6176

## Preface

---

Thank you for purchasing this DAP product.

The purpose of this user manual is to provide instructions for the correct and safe use of this product.

Keep the user manual for future reference as it is an integral part of the product. The user manual shall be stored at an easily accessible location.

This user manual contains information concerning:

- Safety instructions
- Intended and non-intended use of the device
- Installation and operation of the device
- Maintenance procedures
- Troubleshooting
- Transport, storage and disposal of the device

Non-observance of the instructions in this user manual may result in serious injuries and damage of property.

©2025 DAP. All rights reserved.

No part of this document may be copied, published or otherwise reproduced without the prior written consent of Highlite International.

Design and product specifications are subject to change without prior notice.

For the latest version of this document or other language versions, please visit our website [www.highlite.com](http://www.highlite.com) or contact us at [service@highlite.com](mailto:service@highlite.com).

Highlite International and its authorized service providers are not liable for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss arising from the use of, or inability to use or reliance on the information contained in this document.

Highlite International B.V. – Vestastraat 2 – 6468 EX Kerkrade – the Netherlands

## Table of contents

<b>1. Introduction</b> .....	<b>4</b>
1.1. Before Using the Product.....	4
1.2. Intended Use.....	4
1.3. Text Conventions.....	4
1.4. Symbols and Signal Words.....	5
1.5. Symbols on the Information Label.....	5
<b>2. Safety</b> .....	<b>6</b>
2.1. Warnings and Safety Instructions.....	6
2.2. Requirements for the User.....	7
<b>3. Description of the Device</b> .....	<b>8</b>
3.1. Front View.....	8
3.2. Back View.....	8
3.3. Side view.....	9
3.4. Product Specifications.....	10
3.5. Dimensions.....	12
<b>4. Installation</b> .....	<b>12</b>
4.1. Installation Site Requirements.....	12
4.2. Rack Mounting.....	12
4.3. Connecting the Wireless Antennas.....	12
4.4. Connecting the Device to a Router.....	13
4.5. Connecting Audio Devices.....	13
4.6. Connecting to Power Supply.....	14
4.7. Installation of the Batteries.....	15
<b>5. Setup</b> .....	<b>16</b>
5.1. Warnings and Precautions.....	16
5.2. Setup Examples.....	16
5.2.1. Stereo Mode.....	16
5.2.2. Bridge Mode.....	17
5.2.3. 100 V Mode.....	18
5.3. Turning On/Off.....	18
5.4. Standby Mode.....	18
5.5. Network Setup.....	19
<b>6. Operation</b> .....	<b>25</b>
6.1. Safety Instructions for Operation.....	25
6.2. Operation Modes.....	25
6.2.1. Network/Wi-Fi Streaming.....	25
6.2.2. Bluetooth Streaming.....	25
6.2.3. Audio Input Playback.....	26
6.2.4. USB Playback.....	26
6.3. Mode Button.....	26
6.4. Input Selector Knob.....	26
6.5. Master Level Control Knob.....	27
6.6. Bass Level Control Knob.....	27
6.7. Treble Level Control Knob.....	27
6.8. Microphone Level Control Knob.....	27
6.9. Start-up.....	27
6.10. Wi-Fi Control.....	28
6.10.1. 4STREAM App Browse Tab.....	28
6.10.2. 4STREAM App Device Tab.....	29
6.10.2.1. Rename.....	29
6.10.2.2. Speaker Info.....	31
6.10.2.3. Alarm Clock.....	32
6.10.2.4. Preset Content.....	33
6.10.2.5. Sleep Timer.....	34
6.10.2.6. Audio Settings.....	34
6.10.2.7. EQ.....	34
6.10.3. 4STREAM App Search Tab.....	34

6.10.4. 4STREAM App Settings Tab.....	34
6.11. Functions of the Remote Control Buttons.....	35
<b>7. Troubleshooting.....</b>	<b>36</b>
<b>8. Maintenance.....</b>	<b>37</b>
8.1. Safety Instructions for Maintenance.....	37
8.2. Preventive Maintenance.....	37
8.2.1. Basic Cleaning Instructions.....	37
8.3. Corrective Maintenance.....	37
<b>9. Deinstallation, Transportation and Storage.....</b>	<b>38</b>
<b>10. Disposal.....</b>	<b>38</b>
<b>11. Approval.....</b>	<b>38</b>

## 1. Introduction

### 1.1. Before Using the Product



#### Important

**Read and follow the instructions in this user manual before installing, operating or servicing this product.**

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.


After unpacking, check the contents of the box. If any parts are missing or damaged, contact your Highlite International dealer.

Your shipment includes:

- DAP PA-5500SA
- Schuko to IEC power cable (1,5 m)
- 2 wireless antennas
- IR remote control
- User manual



**Figure 1**

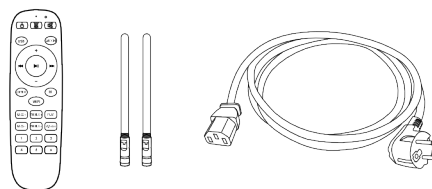

### 1.2. Intended Use

This device is intended for professional use as an internet radio and multimedia player with integrated amplifier. It can be installed only indoors. This device is not suitable for households.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.

### 1.3. Text Conventions

Throughout the user manual the following text conventions are used:

- Buttons: All buttons are in bold lettering, for example "Press the **UP/DOWN** buttons"
- References: References to parts of the device are in bold lettering, for example: "turn the **adjustment handle (05)**". References to chapters are hyperlinked
- 0–255: Defines a range of values
- Notes: **Note:** (in bold lettering) is followed by useful information or tips

## 1.4. Symbols and Signal Words

Safety notes and warnings are indicated throughout the user manual by safety signs.

Always follow the instructions provided in this user manual.



### **DANGER**

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



### **WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



### **CAUTION**

Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.



### **Attention**

Indicates important information for the correct operation and use of the product.



### **Important**

Read and observe the instructions in this document.



### **Electrical hazard**



Provides important information about the disposal of this product.

## 1.5. Symbols on the Information Label

This product is provided with an information label. The information label is located on the bottom plate of the device.

The information label contains the following symbols:



This device is designed for indoor use.



This device falls under IEC protection class I.



This device shall not be treated as household waste.



Caution: Risk of electric shock. Disconnect input power before opening.  
Warning: This appliance must be earthed.

## 2. Safety



**Important**  
**Read and follow the instructions in this user manual before installing, operating or servicing this product.**

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.

### 2.1. Warnings and Safety Instructions



**DANGER**  
**Danger for children**

For adult use only. The device must be installed beyond the reach of children.

- Do not leave any parts of the packaging (plastic bags, polystyrene foam, nails, etc.) within the reach of children. Packaging material is a potential source of danger for children.



**DANGER**  
**Electric shock caused by short-circuit**

This device falls under IEC protection Class I.

- Make sure that the device is electrically connected to ground (earth). Connect the device only to a socket-outlet with a ground (earth) connection.
- Do not cover the ground (earth) connection.
- Do not let the power cable come into contact with other cables. Handle the power cable and all connections with the mains with caution.
- Do not modify, bend, mechanically strain, put pressure on, pull or heat up the power cable.
- Make sure that the power cable is not crimped or damaged. Examine the power cable periodically for any defects.
- Do not immerse the device in water or other liquids. Do not install the device in a location where flooding may occur.
- Do not use the device during thunderstorms. Disconnect the device from the electrical power supply immediately.



**DANGER**  
**Electric shock caused by dangerous voltage inside**

There are areas inside the device where dangerous touch voltage may be present.

- Do not open the device or remove any covers.
- Do not operate the device if the covers or the housing are open. Before operation, check if the housing is firmly closed and all screws are tightly fastened.
- Disconnect the device from the electrical power supply before service and maintenance, and when the device is not in use.



**Attention**  
**Power supply**

- Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.

- Make sure that the cross-sectional area of the extension cords and power cables is sufficient for the required power consumption of the device.



**Attention**  
**General safety**

- Do not shake the device. Avoid brute force when installing or operating the device.
- If the device is dropped or struck, disconnect the device from the electrical power supply immediately.
- If the device is exposed to extreme temperature variations (e.g. after transportation), do not switch it on immediately. Let the device reach room temperature before switching it on, otherwise it may be damaged by the formed condensation.
- If the device fails to work properly, discontinue use immediately.



**Attention**  
**For professional use only**  
**This device must be used only for the purposes it is designed for.**

This device is designed to be used as an internet radio and multimedia player with integrated amplifier. Any incorrect use may lead to hazardous situations and result in injuries and material damage.

- This device is not suitable for households.
- This device does not contain user-serviceable parts. Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.



**Attention**  
**Do not expose the device to conditions that exceed the rated IP class conditions.**

This device is IP20 rated. IP (Ingress Protection) 20 class provides protection against solid objects greater than 12 mm, such as fingers, and no protection against harmful ingress of water.

## 2.2. Requirements for the User

This product may be used by ordinary persons. Maintenance may be carried out by ordinary persons. Installation and service shall be carried out only by instructed or skilled persons. Contact your Highlite International dealer for more information.

Instructed persons have been instructed and trained by a skilled person, or are supervised by a skilled person, for specific tasks and work activities associated with the installation, service and maintenance of this product, so that they can identify risks and take precautions to avoid them.

Skilled persons have training or experience, which enables them to recognize risks and avoid hazards associated with the installation, service and maintenance of this product.

Ordinary persons are all persons other than instructed persons and skilled persons. Ordinary persons include not only users of the product but also any other persons that may have access to the device or who may be in the vicinity of the device.




### 3. Description of the Device

The DAP PA-5500SA is an internet radio and multimedia player with an integrated 460-watt, 100-volt amplifier. Designed to fit into a 19-inch rack, the device has both balanced and unbalanced inputs and outputs. It can be operated using the controls on the front, with the 4STREAM app or with the included remote control.

#### 3.1. Front View


Figure 2

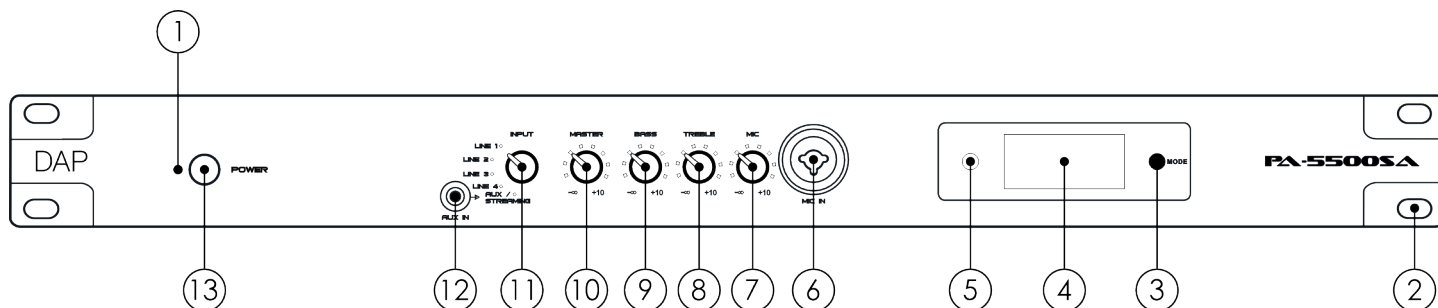

- |  |                                       |
|--|---------------------------------------|
| 01) Power LED indicator (blue)                             | 08) Treble level control knob         |
| 02) 4 x mounting openings (for installation in a 19" rack) | 09) Bass level control knob           |
| 03) Mode button  | 10) Master level control knob         |
| 04) OLED display (1,4")                                    | 11) Input selector knob               |
| 05) Standby LED indicator (red)                            | 12) Balanced auxiliary IN (mini jack) |
| 06) Balanced microphone IN (XLR/jack combo)                | 13) Power switch ON/OFF               |
| 07) Microphone level control knob                          |                                       |

#### 3.2. Back View


Figure 3

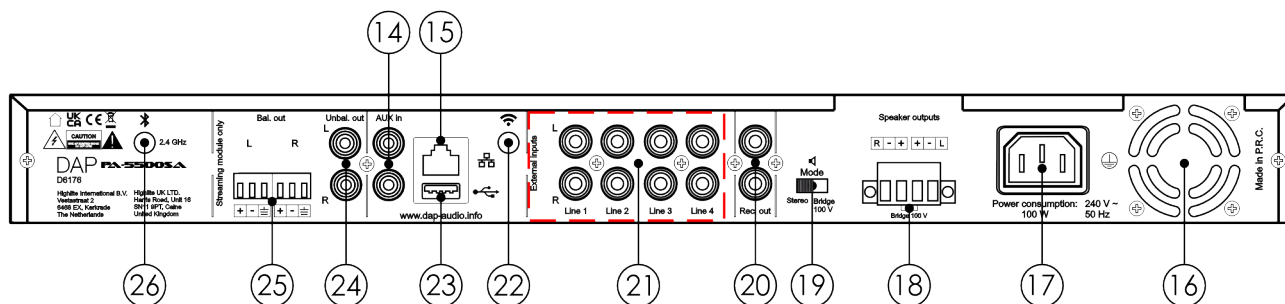

- |  |   |
|--|---|
| 14) Unbalanced auxiliary IN (RCA - left/right) - (streaming module only) | 21) 4 x unbalanced line IN (RCA - left/right)                             |
| 15) RJ45 LAN connector IN  | 22) Wi-Fi antenna connector   |
| 16) Fan vent   | 23) USB-A port  |
| 17) IEC power connector IN   | 24) Unbalanced OUT (RCA - left/right) - (streaming module only)           |
| 18) Speaker OUT (wire terminals - left/right - positive/negative)        | 25) Balanced OUT (wire terminals - left/right - positive/negative/ground) |
| 19) Mode switch (stereo - bridge/100 V)                                  | 26) Bluetooth antenna connector   |
| 20) Unbalanced recording OUT (RCA - left/right)                          |   |

### 3.3. Side view

Figure 4

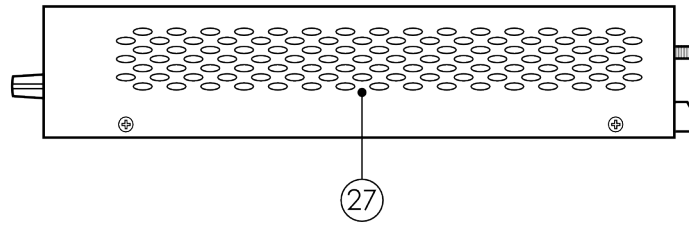

27) Ventilation holes


### 3.4. Product Specifications

Model:	PA-5500SA
<b>Inputs:</b>	
Mono Inputs	1
Mono Input Connector	3-pin XLR
Mono Input Gain Range	10 dB
Stereo Inputs	4
Stereo Input Connector	RCA
Auxiliary Inputs	2
Auxiliary Input Connector	RCA / TRS balanced 3.5 mm
Transformer	N/A V
<b>Outputs:</b>	
Power Amplifier RMS Output	240 W
Power Amplifier Peak Output	460 W
Output per Channel into 8 ohms at 1 kHz	240 W
Bridge Output 100 V	240 W
Output Channels	2
Output Mode	Bridge / Stereo
Output Connector	3-pin XLR / Terminal
Main Outputs	2
Main Output Connector	Phoenix / RCA
<b>Playback:</b>	
Supported Audio Files	AAC/AAC+ / ALAC / APE / FLAC / MP3 / WAV
Supported Format	exFAT / FAT16 / FAT32
Maximum Storage Size	128 GB
Media Input/Output	USB-A
USB Type	2.0
Playback Functions	Up (Skip) / Down (Skip) / Play / Pause / Stop
<b>Audio Specifications:</b>	
THD Level	< 0.1%
Signal-to-noise Ratio	> 100 dB
Slew Rate	14 V/ $\mu$ s
Amp Technology	Class D
Damping Factor	300 :1
Frequency Response Minimum	20 Hz
Frequency Response Maximum	20000 Hz
Phantom Power	No
<b>Wireless Specifications:</b>	
Bluetooth Version	5.0
Bluetooth Classification	2
Bluetooth Audio Profile	aptX HD
Bluetooth Range	15 m

Carrier Frequency	2,4 GHz
<b>Control and Programming:</b>	
Control Mode	App / Remote
Display	OLED
Display Size	1,4 "
<b>Electrical Specifications and Connections:</b>	
Power Supply	220-240 V AC 50 Hz
SMPS	No
Backup Power Supply	No
Power Consumption	100 W
Power Connector In	IEC
Data Connector In	RJ45
<b>Mechanical Specifications:</b>	
Height (mm)	44,5 mm
Width (mm)	483 mm
Depth (mm)	210 mm
Flightcase Size	19"
Rack Units	1 U
Housing	Steel
Colour	Black
Finish	Powder Coating
Weight	2,5 kg
IP Rating	IP20 (indoor use only)
<b>Product Properties:</b>	
Electronic Protection	Clip limiter / DC voltage / High frequency / Overheat / Overload / Short circuit / Softstart / Under voltage
LED Indicators	Power
<b>Thermal Specifications:</b>	
Maximum Ambient Temperature	45 °C
Minimum Ambient Temperature	0 °C
<b>Included Items:</b>	
Included Cables	IEC cable
Included Remotes	IR Remote battery not included

### 3.5. Dimensions

Figure 5

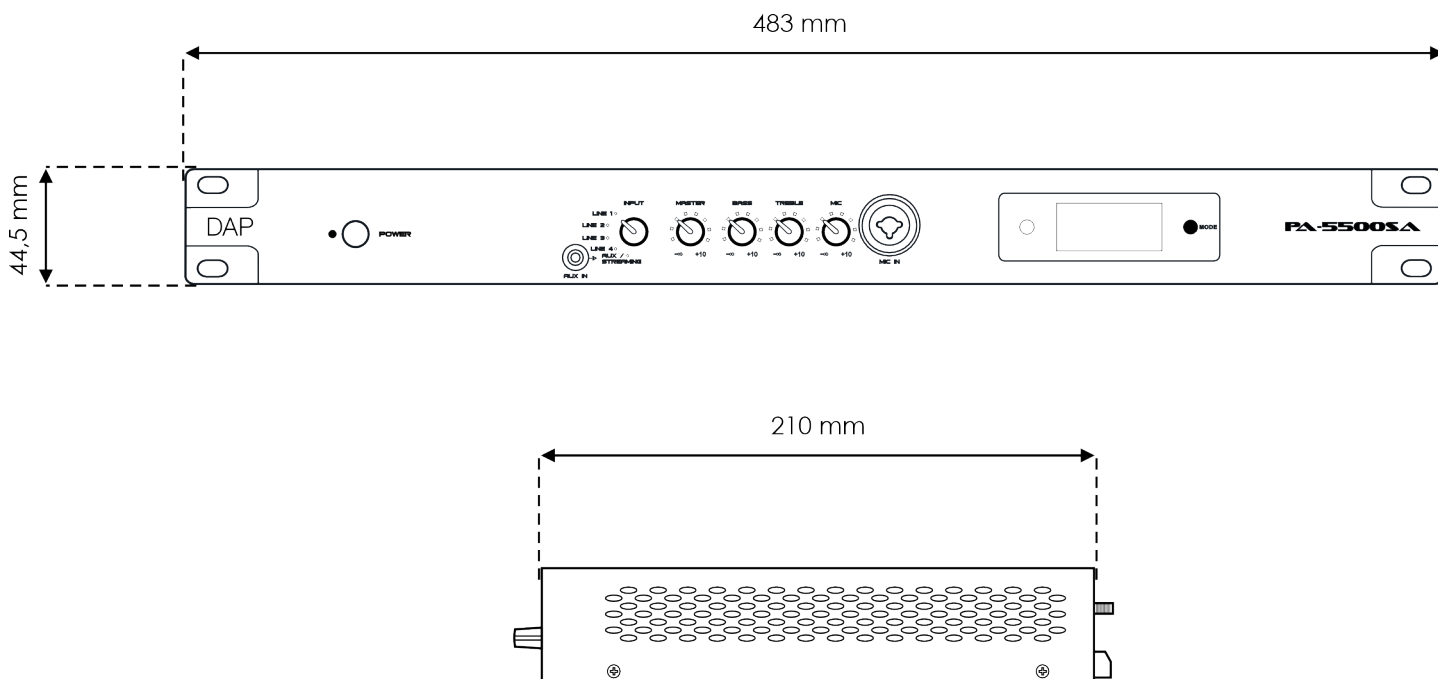

## 4. Installation

### 4.1. Installation Site Requirements

- The device can be used only indoors.
- The minimum distance to other objects must be bigger than 0,5 m.
- The maximum ambient temperature  $t_a = 40\text{ °C}$  must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40 °C.

### 4.2. Rack Mounting

The device can be mounted in a standard 19-inch rack. The device requires 1 rack unit (RU) of space, which is 44,5 mm high.

Make sure that the rack is sufficiently secured to prevent it from becoming unstable or falling over.

To mount the device in a two-post rack, follow the steps below:

- 01) Insert 4 cage nuts in the openings on the rack posts where you want to mount the device.
- 02) Position the device in front of the rack posts so that the 4 **mounting openings (02)** on the flanges face the openings on the rack posts with cage nuts.
- 03) Use a screwdriver to mount the device to the rack posts with 4 screws.

### 4.3. Connecting the Wireless Antennas

The device is delivered with 2 wireless antennas. The antennas are not connected. To install the antennas:

- 01) Put the 2 wireless antennas into the **Wi-Fi antenna connector (22)** and the **Bluetooth antenna connector (26)**.
- 02) Turn the 2 wireless antennas clockwise to tighten them.
- 03) Make sure that the wireless antennas point up.

#### 4.4. Connecting the Device to a Router

To make a LAN connection, it is necessary to connect the device to a router.

- 01) Plug one end of the network cable into an RJ45 connector on the router.
- 02) Plug the other end of the network cable into the **RJ45 LAN connector IN (15)** on the device.

##### Note:

If you use a network cable and the DHCP function on the router is activated, it is not necessary to configure the network.

#### 4.5. Connecting Audio Devices

On the front, the device has:

- **balanced microphone IN (XLR/jack combo) (06)**
- **balanced auxiliary IN (mini jack) (12)**

On the back, the device has:

- **unbalanced auxiliary IN (RCA - left/right) - (streaming module only) (14)**
- **Speaker OUT (wire terminals - left/right - positive/negative) (18)**
- **unbalanced recording OUT (RCA - left/right) (20)**
- **4 x unbalanced line IN (RCA - left/right) (21)**
- **unbalanced OUT (RCA - left/right) - (streaming module only) (24)**
- **balanced OUT (wire terminals - left/right - positive/negative/ground) (25)**

Turn off the PA-5500SA when connecting audio devices in order to avoid interference.

- Use a suitable cable to connect a microphone to the **balanced microphone IN (XLR/jack combo) (06)**.
- Use a suitable cable to connect an auxiliary device (a phone, a tablet, a computer etc.) to the **balanced auxiliary IN (mini jack) (12)**.
- Use a suitable cable to connect an auxiliary device (a phone, a tablet, a computer etc.) to the **unbalanced auxiliary IN (RCA - left/right) - (streaming module only) (14)**.
- Use suitable cables to connect passive speakers to the **Speaker OUT (wire terminals - left/right - positive/negative) (18)**.

To connect cables to the **Speaker OUT (wire terminals - left/right - positive/negative) (18)**:

- 01) Turn the screws on top of the **Speaker OUT (wire terminals - left/right - positive/negative) (18)** counter clockwise to loosen them.
  - 02) Insert the left positive cable wire into the left positive wire terminal.
  - 03) Insert the left negative cable wire into the left negative wire terminal.
  - 04) Insert the right positive cable wire into the right positive wire terminal.
  - 05) Insert the right negative cable wire into the right negative wire terminal.
  - 06) Turn the screws on top of the **Speaker OUT (wire terminals - left/right - positive negative) (18)** clockwise to tighten them. Do not overtighten.
- Use a suitable cable to connect a recording device to the **unbalanced recording OUT (RCA - left/right) (20)**.
  - Use suitable cables to connect up to 4 line-level devices (CD players, mixers etc.) to the **4 x unbalanced line IN (RCA - left/right) (21)**.
  - Use suitable cables to connect an audio output device (a mixer etc.) to the **unbalanced OUT (RCA - left/right) - (streaming module only) (24)**, and **balanced OUT (wire terminals - left/right - positive/negative/ground) (25)**.

To connect the cables to the **balanced OUT (wire terminals - left/right - positive/negative/ground) (25)**:

- 01) Turn the screws on top of the **balanced OUT (wire terminals - left/right - positive/negative/ground) (25)** counter clockwise to loosen them.
- 02) Insert the left positive cable wire into the left positive wire terminal.
- 03) Insert the left negative cable wire into the left negative wire terminal.
- 04) Insert the left ground cable wire into the left ground wire terminal.
- 05) Insert the right positive cable wire into the right positive wire terminal.
- 06) Insert the right negative cable wire into the right negative wire terminal.
- 07) Insert the right ground cable wire into the right ground wire terminal.
- 08) Turn the screws on top of the **balanced OUT (wire terminals - left/right - positive/negative/ground) (25)** clockwise to tighten them. Do not overtighten.

**Notes:**

- Use a dynamic microphone only.
- Compatible audio input devices can also be connected with Bluetooth (see [6.2.2. Bluetooth Streaming](#) on page 25).

#### 4.6. Connecting to Power Supply



**DANGER**  
Electric shock caused by short-circuit

The device accepts AC mains power at 220–240 V and 50 Hz. Do not supply power at any other voltage or frequency to the device.

This device falls under IEC protection class I. Make sure that the device is always electrically connected to the ground (earth).

Before connecting the device to the socket-outlet:

- Make sure that the power supply matches the input voltage specified on the information label on the device.
- Make sure that the socket-outlet has a ground (earth) connection.

Connect the device to the socket-outlet with the power plug.

#### 4.7. Installation of the Batteries


The device can be operated with an IR remote control. The remote control is included in the delivery.

The remote control is delivered without batteries. It accepts 2 x AAA 1,5 V (alkaline) batteries.

To install the batteries:

- 01) Press on the battery compartment cover and slide it downwards to open the battery compartment.
- 02) Insert 2 x AAA 1,5 V batteries into the battery housing. Make sure that you install the batteries with correct polarity orientation.
- 03) Close the battery compartment cover.

Figure 6

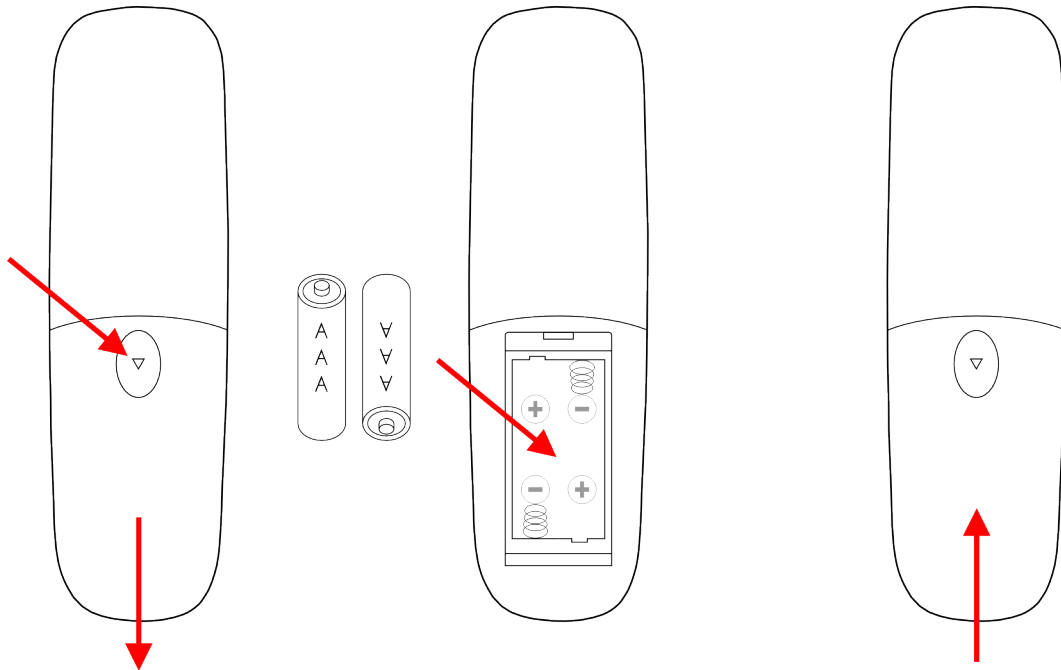



## 5. Setup

### 5.1. Warnings and Precautions



#### Attention

Connect all data cables before supplying power.

Disconnect power supply before connecting or disconnecting data cables.


### 5.2. Setup Examples

The DAP PA-5500SA can be used in Stereo, Bridge or 100 V mode.

#### 5.2.1. Stereo Mode

In Stereo mode, you can connect 2 speakers to the **Speaker OUT (wire terminals - left/right - positive/negative) (18)**.

Figure 7

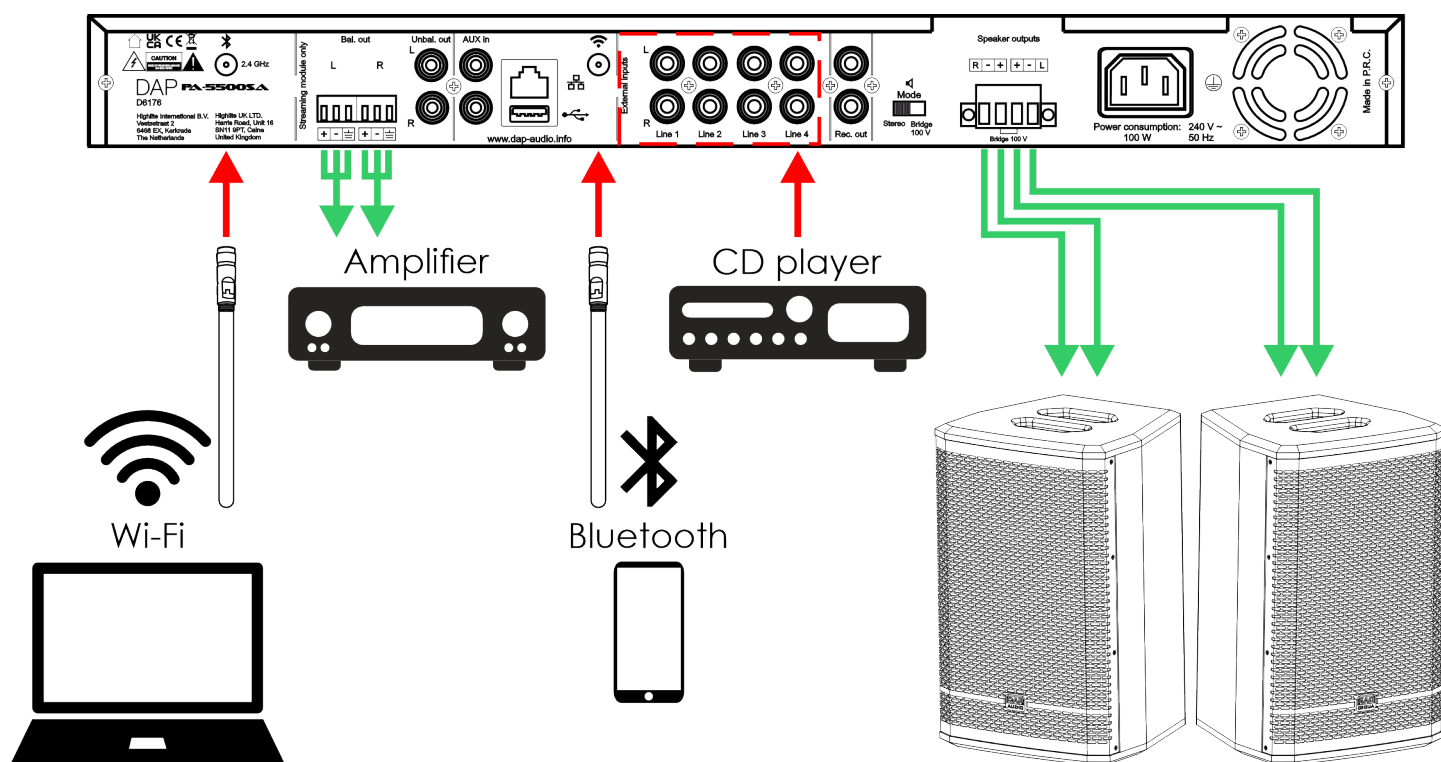

#### Note:


Make sure that the **Mode switch (stereo - bridge/100 V) (19)** is in STEREO position.

### 5.2.2. Bridge Mode

In Bridge mode, you can connect 1 speaker to the **Speaker OUT (wire terminals - left/right - positive/negative) (18)**.

Use the (+) terminals only to connect the speaker.

Figure 8

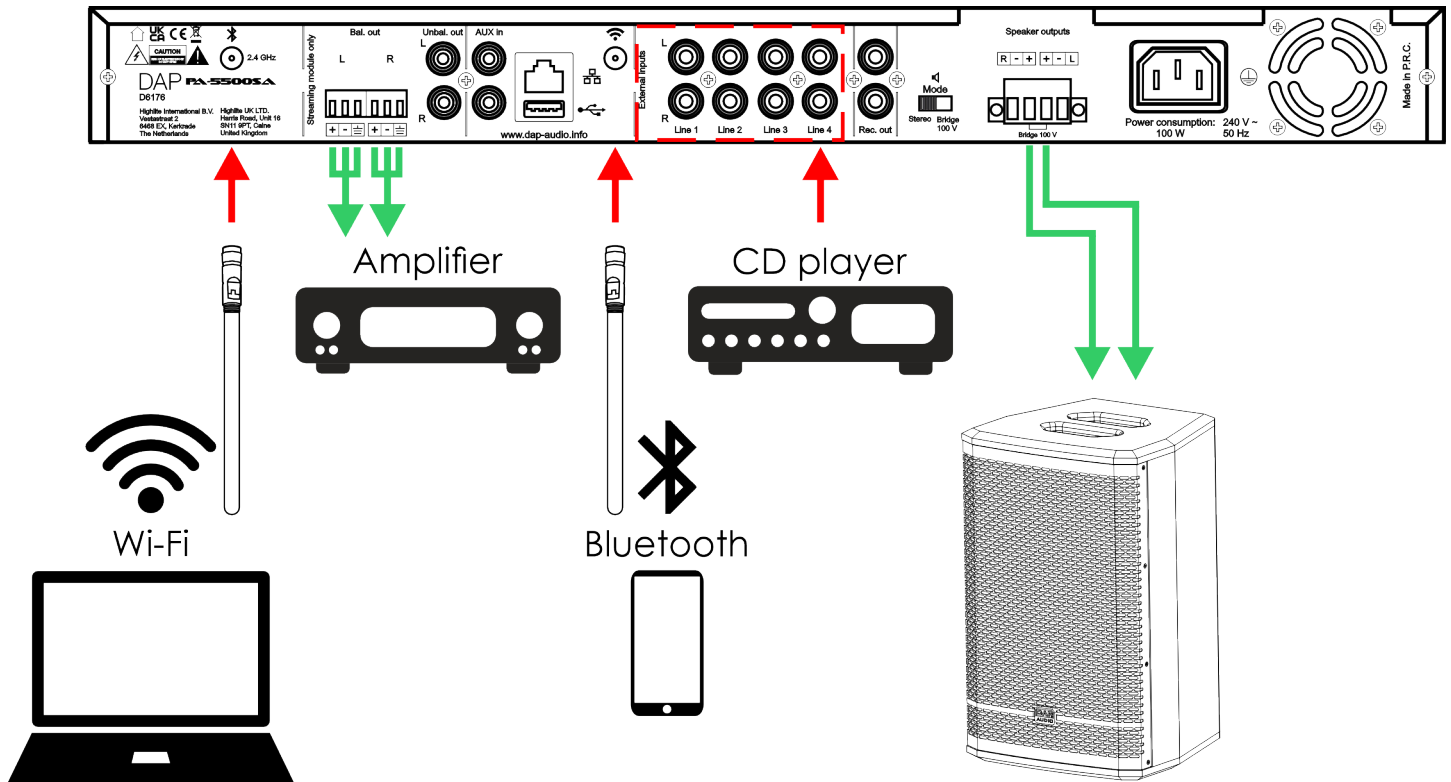

**Note:**


Make sure that the **Mode switch (stereo - bridge/100 V) (19)** is in BRIDGE/100 V position.

### 5.2.3. 100 V Mode

In 100 V mode, you can connect 1 100 V speaker to the **Speaker OUT (wire terminals - left/right - positive/negative) (18)**.

Use the (+) terminals only to connect the speaker.

Figure 9

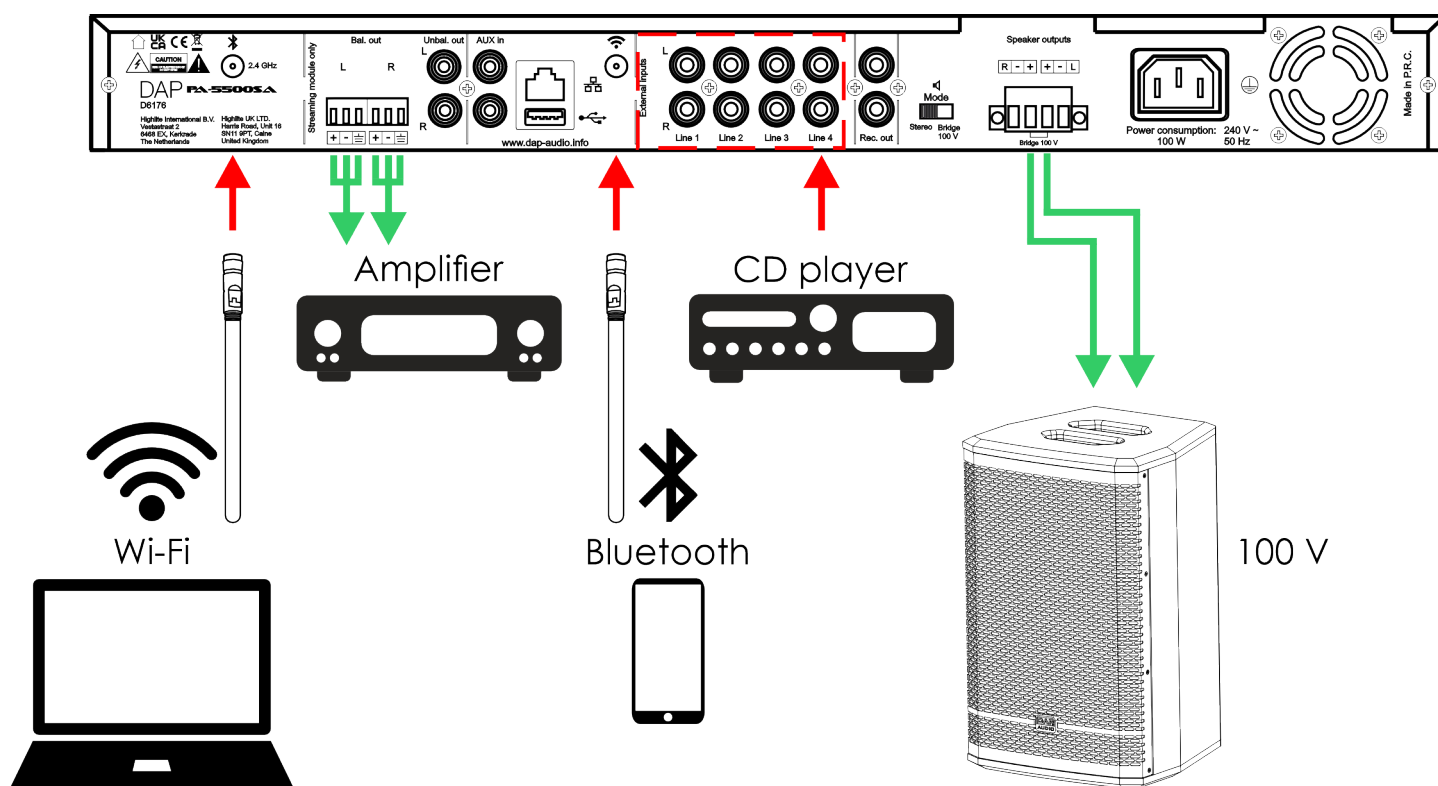

#### Note:

Make sure that the **Mode switch (stereo - bridge/100 V) (19)** is in BRIDGE/100 V position.

### 5.3. Turning On/Off

The device has a power switch.

- To turn the device on, set the **power switch (13)** to ON position.
- To turn the device off, set the **power switch (13)** to OFF position.

Make sure that the device is turned off with the **power switch (13)** when not in use.

### 5.4. Standby Mode

The device has a 'standby' mode.

- To enter 'standby' mode, press and hold the **mode button (03)** for 5 seconds or press the standby button on the remote control (see [6.11. Functions of the Remote Control Buttons](#) on page 35). In standby mode, the **standby LED indicator (05)** turns red.
- To exit 'standby' mode, press the **mode button (03)** once or press the standby button on the remote control.

#### Note:

Only the streaming module goes into standby mode.

## 5.5. Network Setup

You can connect the PA-5500SA directly to a network with a CAT-5e or CAT 6 cable. Internet access is automatic. No further action is necessary.

To connect the PA-5500SA to a network via Wi-Fi, follow the steps below:


1) Install the 4STREAM app on your Android or iOS device.

**Note:**

The 4STREAM app is also needed to control the device via Wi-Fi.




- 2) On your device, make sure that Wi-Fi, Bluetooth and Location are turned on.
- 3) Open the 4STREAM app on your device.
- 4) Press 'Add Device'.

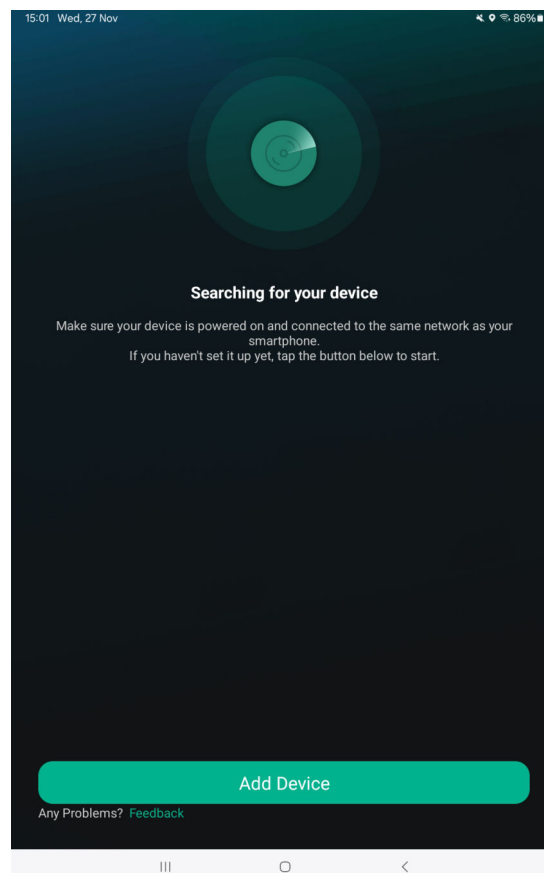


5) Press 'indicator is blinking'.


**Note:** The indicator on the PA-5500SA does not blink!

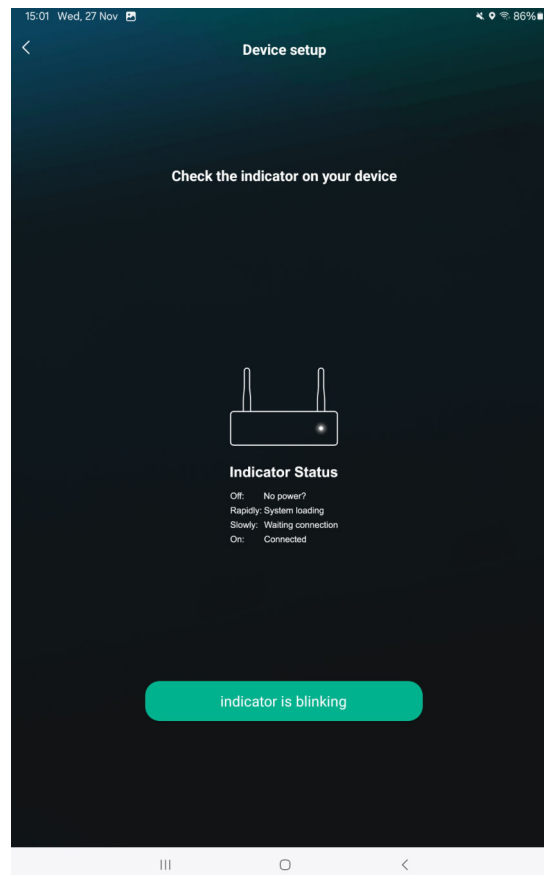


6) Press 'pair via wifi'.

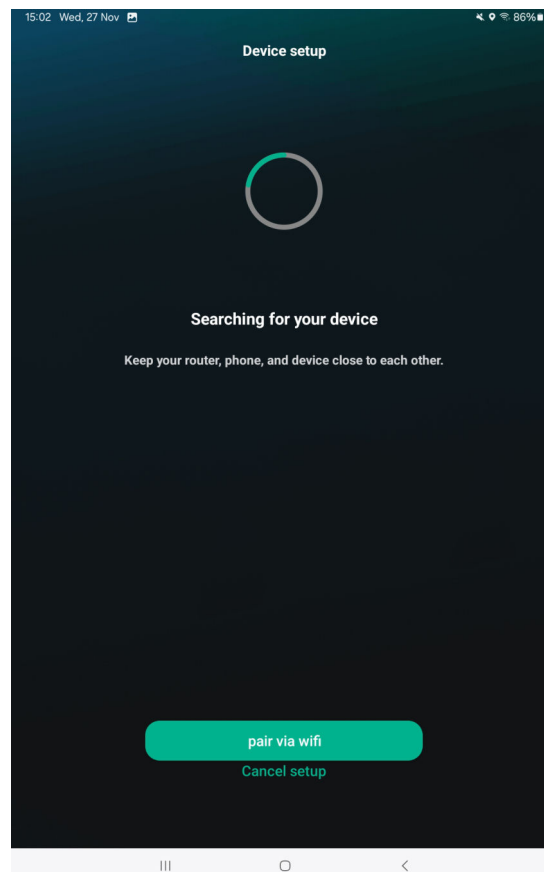


7) Press 'Settings'.

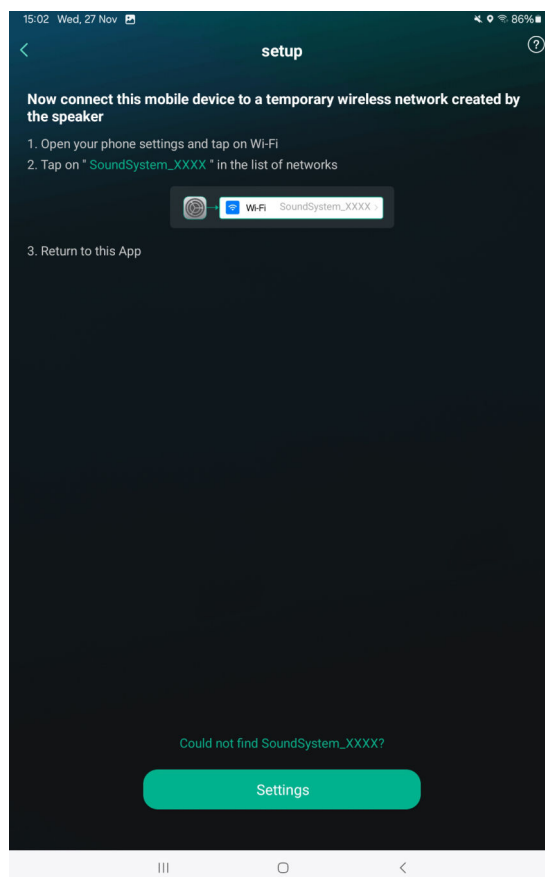

8) Select the PA-5500SA in available networks.

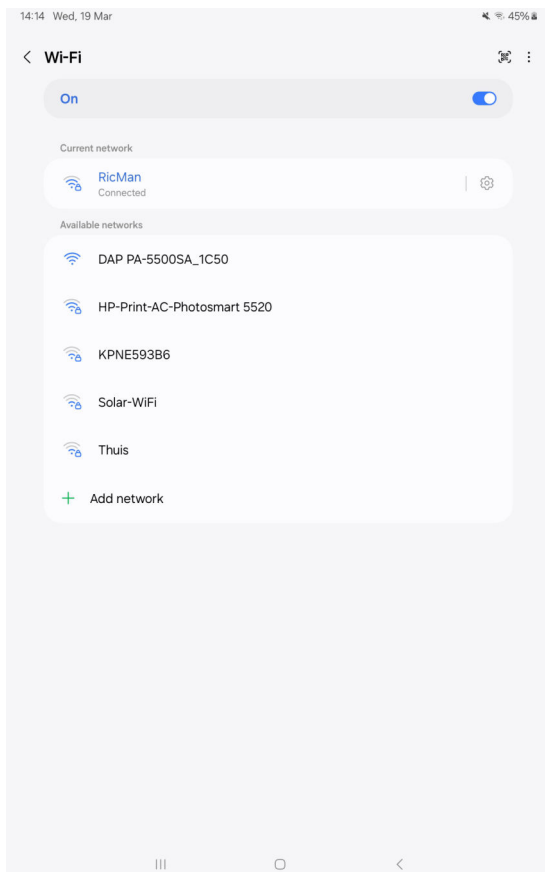

9) Following the internet quality check, press 'Connect only this time' or 'Always connect'.

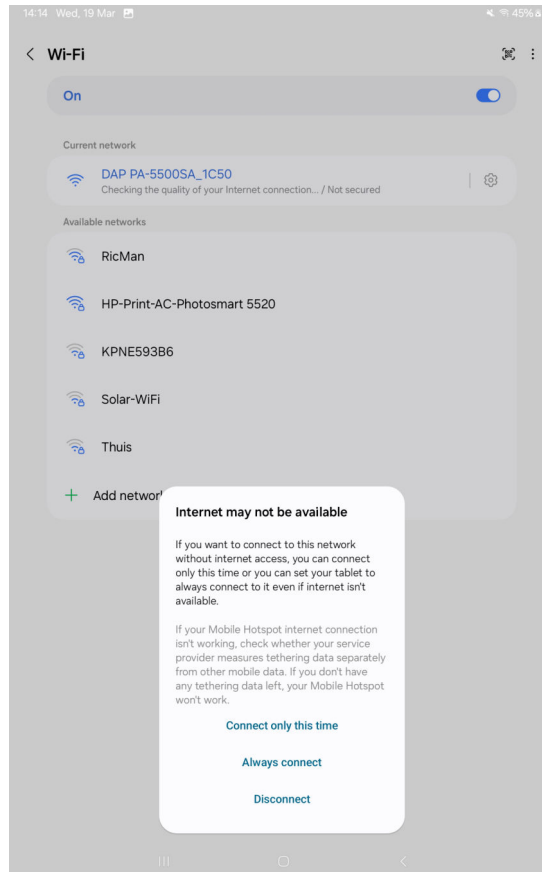



10) Return to the app.

11) If required, enter the Wi-Fi network password of your chosen network.

**Note:**


Press 'Change Wi-Fi' to select a different Wi-Fi network.

12) Press 'Continue'.

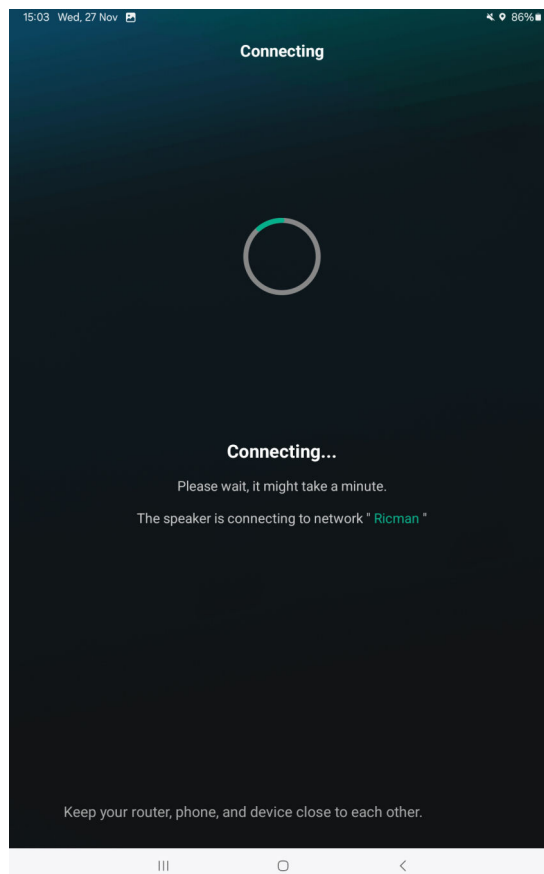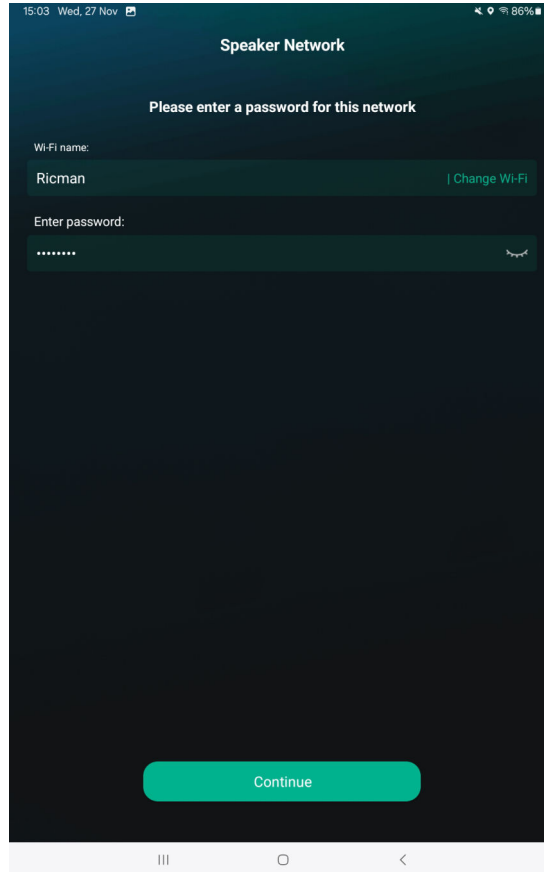




13) Press 'Settings' to connect your device to the same network as the PA-5500SA.

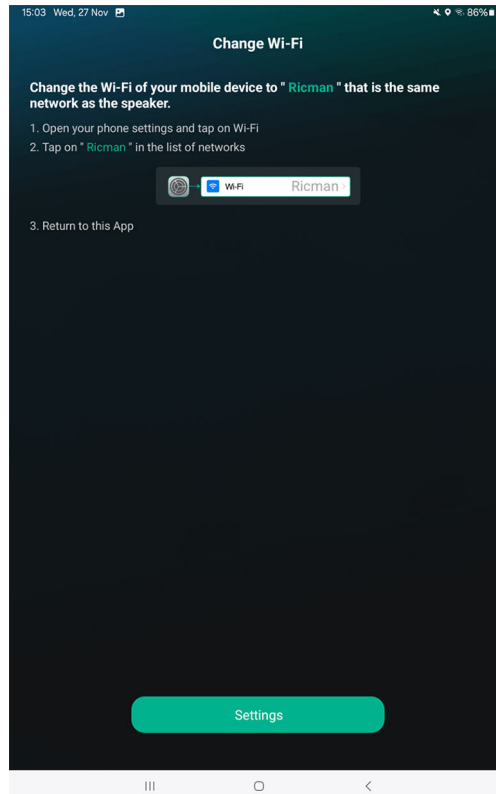

14) Return to the app.

The device will now connect to your network.

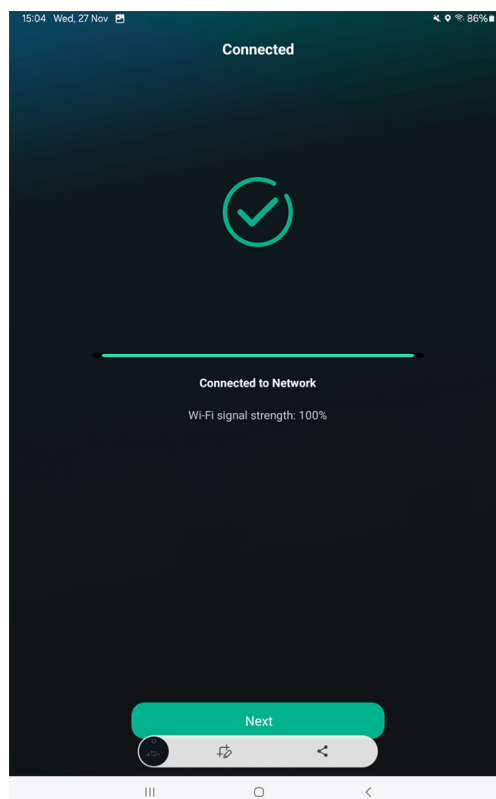

15) Press 'Next' to name the device (see [6.10.2.1. Rename](#) on page 29).

The device can now be controlled via Wi-Fi (see [6.10. Wi-Fi Control](#) on page 28).

## 6. Operation

### 6.1. Safety Instructions for Operation

**Attention**

This device must be used only for the purposes it is designed for.

This device is intended for professional use as an internet radio and multimedia player with integrated amplifier. It can be used only indoors. This device is not suitable for households.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.

**Attention****Power supply**

Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.

### 6.2. Operation Modes

To use all modes on the device, it is necessary to establish a network connection (see [5.5. Network Setup](#) on page 19).

The PA-5500SA supports the following operation modes:

- Network/Wi-Fi streaming (see [6.2.1. Network/Wi-Fi Streaming](#))
- Bluetooth streaming (see [6.2.2. Bluetooth Streaming](#))
- Audio input playback (see [6.2.3. Audio Input Playback](#))
- USB playback (see [6.2.4. USB Playback](#))

#### 6.2.1. Network/Wi-Fi Streaming


Network/Wi-Fi streaming is only available after the network has been set up. The 4STREAM app is needed to control the device via Wi-Fi (see [5.5. Network Setup](#) on page 19).

#### 6.2.2. Bluetooth Streaming

In this mode, you can stream sound from a Bluetooth device.

To stream sound, connect your Bluetooth device to the PA-5500SA by following the steps below:

01) Press the **mode button (03)** on the PA-5500SA until the Bluetooth symbol appears.

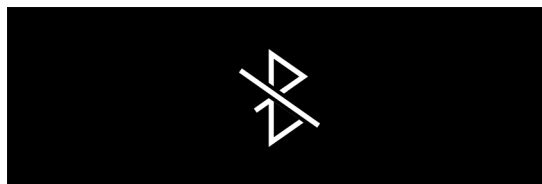

02) Enable Bluetooth on your Bluetooth device.

03) Scan for available devices on your Bluetooth device. The ID of the PA-5500SA is 'SoundSystem'.

04) Press 'SoundSystem' on your Bluetooth device to begin pairing.

05) When prompted, press 'Pair' on your Bluetooth device.

After pairing, sound can be streamed from your Bluetooth device to the the PA-5500SA via Bluetooth.

**Note:**

After pairing the voice prompt says "Power On, Apt-X Classic".


### 6.2.3. Audio Input Playback

In this mode, you can play sound from an external audio device on the PA-5500SA.

The external audio device and the PA-5500SA need to be connected with a cable that has connectors suitable for both devices. The audio input connectors on the PA-5500SA are RCA.

To connect an external audio device to the PA-5500SA, follow the steps below:

- 01) Connect a cable with suitable connectors to the audio outputs on your external audio device.
- 02) Connect the RCA connectors on the cable to one of the **unbalanced line IN (RCA - left/right) (21)** connectors on the PA-5500SA.
- 03) Press the **mode button (03)** until the audio input symbol appears.

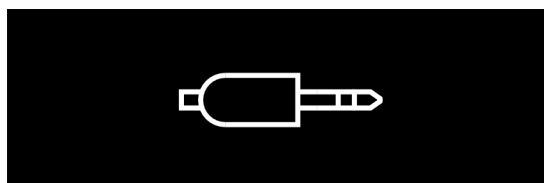

After connecting the devices, sound can be played from your external audio device to the PA-5500SA.

### 6.2.4. USB Playback

In this mode, you can play sound via a USB drive.

To play sound via USB, insert a USB drive into the **USB-A port (23)**.

The PA-5500SA will automatically switch to USB mode and sound will start to play automatically.

#### Note:

The USB player mode overrides all other modes on the PA-5500SA.

The PA-5500SA is compatible with USB drives (max. capacity 128 GB) formatted to exFAT / FAT16 / FAT32 and supports the following file formats:

AAC / AAC+ / ALAC / APE / FLAC / MP3 / WAV

### 6.3. Mode Button

Press the **mode button (03)** once to cycle through the following modes:

- Network/Wi-Fi streaming
- Bluetooth streaming
- Audio input playback
  
- Press and hold the **mode button (03)** for 5 seconds to enter standby mode.
- Double press the **mode button (03)** to reset the network.
- Triple press the **mode button (03)** to restore the factory settings.

#### Note:

USB playback starts automatically when a USB drive is inserted into the **USB-A port (23)**.

### 6.4. Input Selector Knob

Use the **input selector knob (11)** to select one of the following inputs:

- Line 1
- Line 2
- Line 3
- Line 4
- Aux / Streaming

### 6.5. Master Level Control Knob

Use the **master level control knob (10)** to adjust the level of the master volume.

### 6.6. Bass Level Control Knob

Use the **bass level control knob (09)** to adjust the level of the bass.

### 6.7. Treble Level Control Knob

Use the **treble level control knob (08)** to adjust the level of the treble.

### 6.8. Microphone Level Control Knob

Use the **microphone level control knob (07)** to adjust the level of the microphone input.

### 6.9. Start-up

Upon start-up, the device searches for a network.

If the device is connected to a router with a network cable, internet access is automatic. No further action is necessary.


When you start the device for the first time and you want to use a wireless network, it needs to be configured (see [5.5. Network Setup](#) on page 19). You need to perform this action only once.

## 6.10. Wi-Fi Control


The PA-5500SA can be controlled with Wi-Fi via the 4STREAM app after it has been configured (see [5.5. Network Setup](#) on page 19).

### 6.10.1. 4STREAM App Browse Tab

From the browse tab, you can preset content (see [6.10.2.4. Preset Content](#) on page 33), access your library and music services, and select sources on the device.

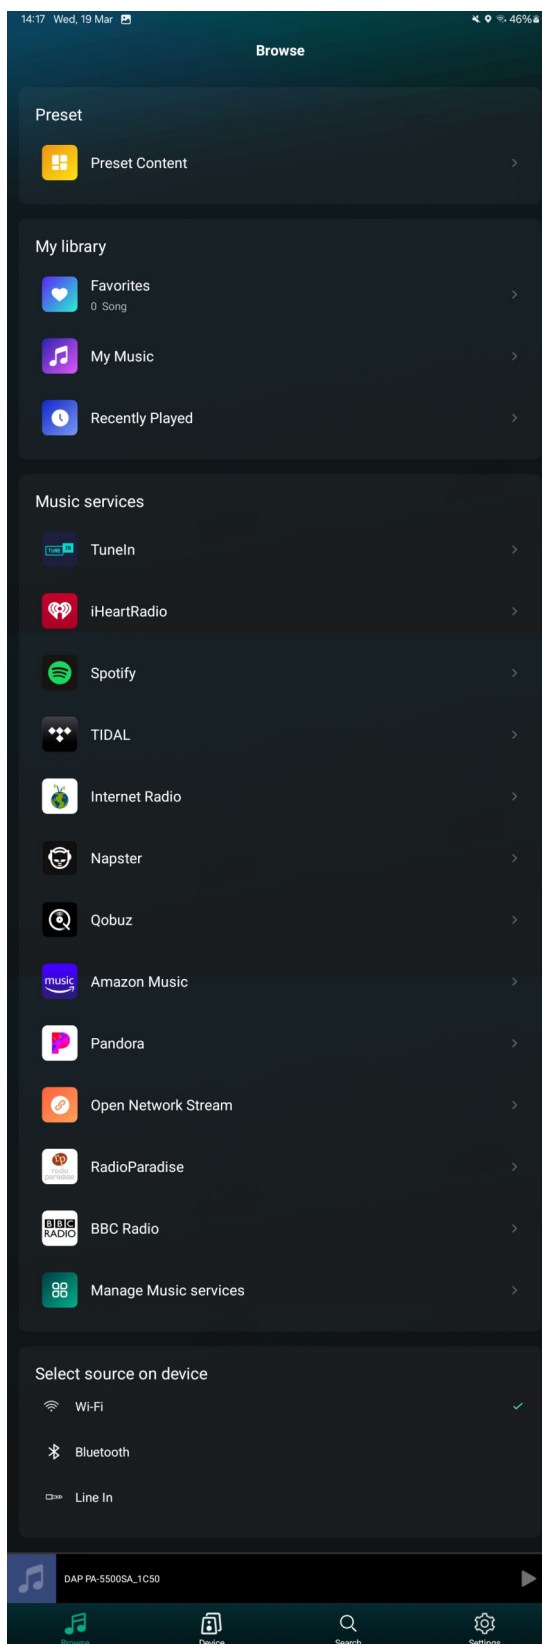

## 6.10.2. 4STREAM App Device Tab

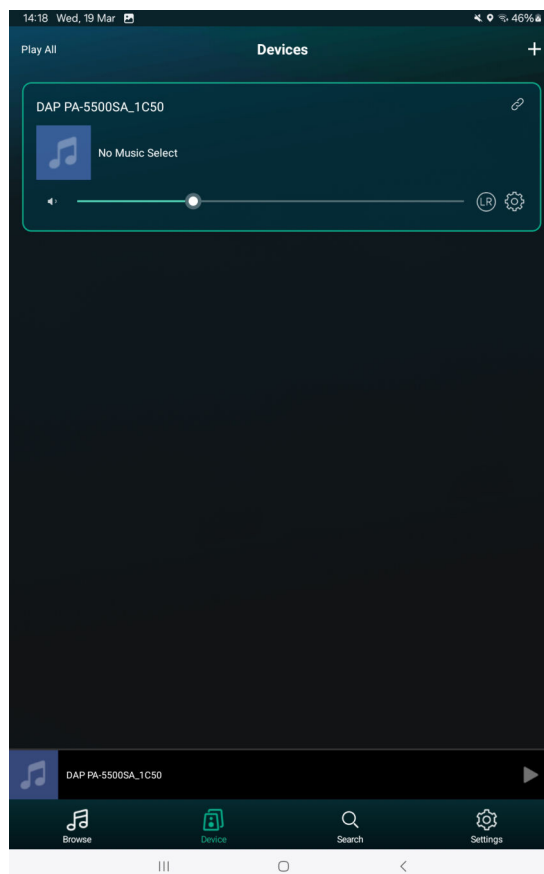

In the app device tab, you can add new devices to the setup, synchronize play, adjust the volume, select left, right and stereo channels and access the following settings by pressing the settings icon:

- Rename (see [6.10.2.1. Rename](#))
- Speaker Info (see [6.10.2.2. Speaker Info](#))
- Alarm Clock (see [6.10.2.3. Alarm Clock](#))
- Present Content (see [6.10.2.4. Preset Content](#))
- Sleep Timer (see [6.10.2.5. Sleep Timer](#))
- Audio Settings (see [6.10.2.6. Audio Settings](#))
- EQ (see [6.10.2.7. EQ](#))


### 6.10.2.1. Rename

This screen shows the current device name and preset names.

The device name can be set to a custom name or one of the following preset names:

- DAP PA-5500\_XXXX (recommended name)
- Bedroom
- Living Room
- Library
- Kitchen
- Bathroom
- Office
- Den
- Dining Room
- Family Room
- Foyer
- Garage
- Garden
- Guest Room
- Hallway

- Master Room
- Media Room
- Patio
- Playroom
- Pool
- Portable
- TV Room

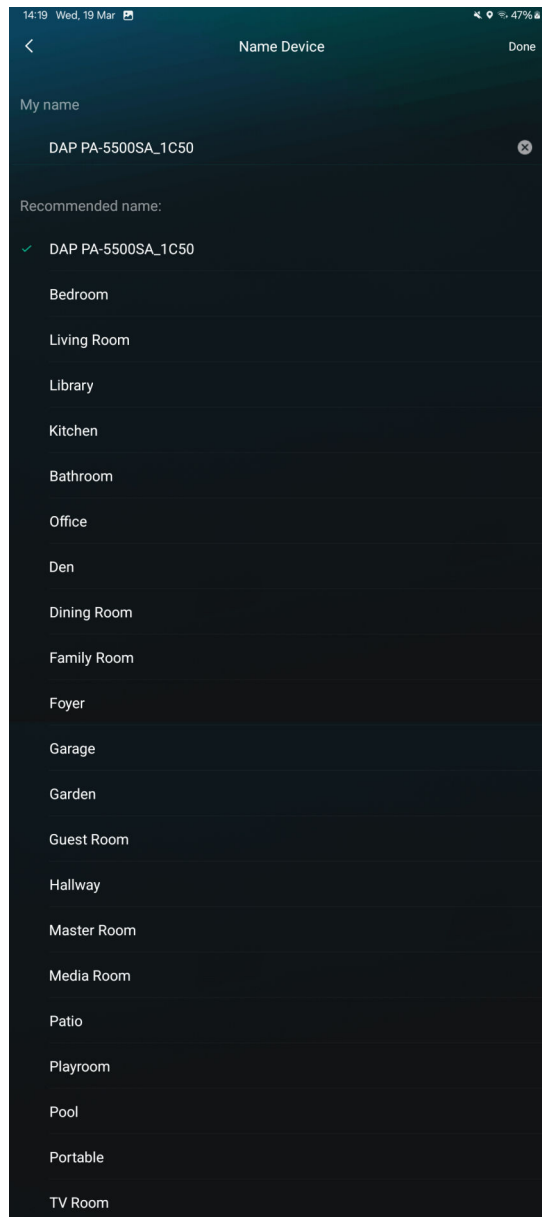

To set the device name:

- 01) Press on the existing name to enter a custom name, or;
- 02) Press a preset name.
- 03) Press 'Done' on the top right of the screen.


**Note:**

If naming the device immediately after network setup, press '>' on the top right of the screen after choosing the preset name.

### 6.10.2.2. Speaker Info

This screen shows the speaker info.

From this screen, it is also possible to set up a personal hotspot, change the audio prompts language and restore factory settings.

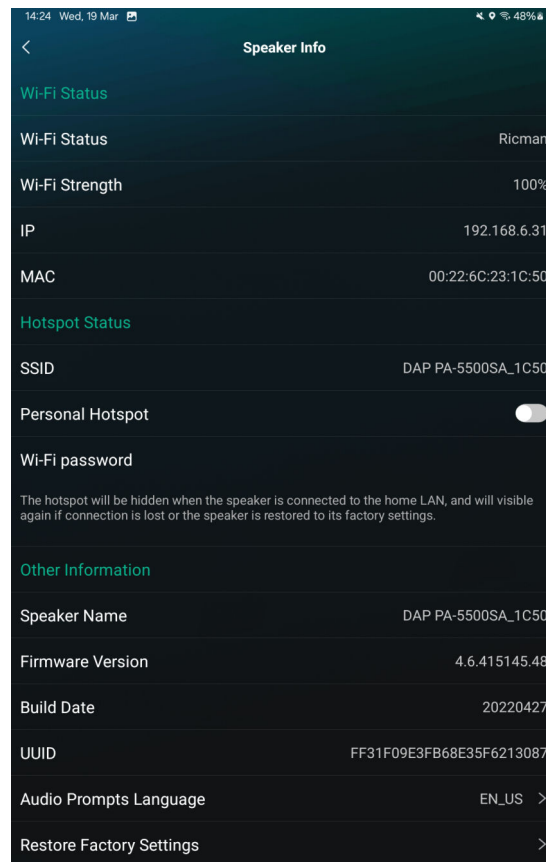

To setup a personal hotspot:

- 01) Press the 'Personal Hotspot' button.
- 02) Enter a Wi-Fi password.
- 03) Press Done.

To change the audio prompts language:

- 01) Press 'Audio Prompts Language'
- 02) Select Chinese or English.


To restore factory settings:

- 01) Press 'Restore Factory Settings'.
- 02) Press Confirm to restore factory settings.




### 6.10.2.3. Alarm Clock

This screen shows the alarm clock.

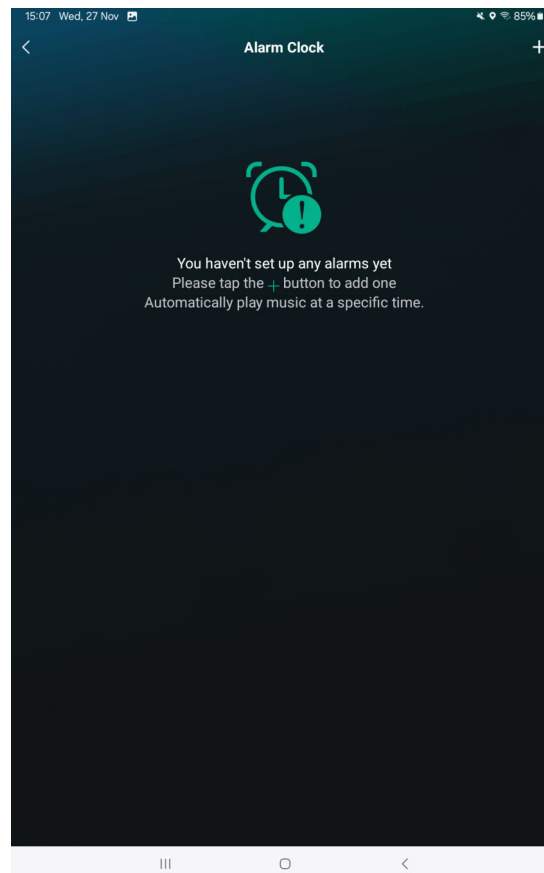

To add an alarm:

01) Press '+' in the top right corner.

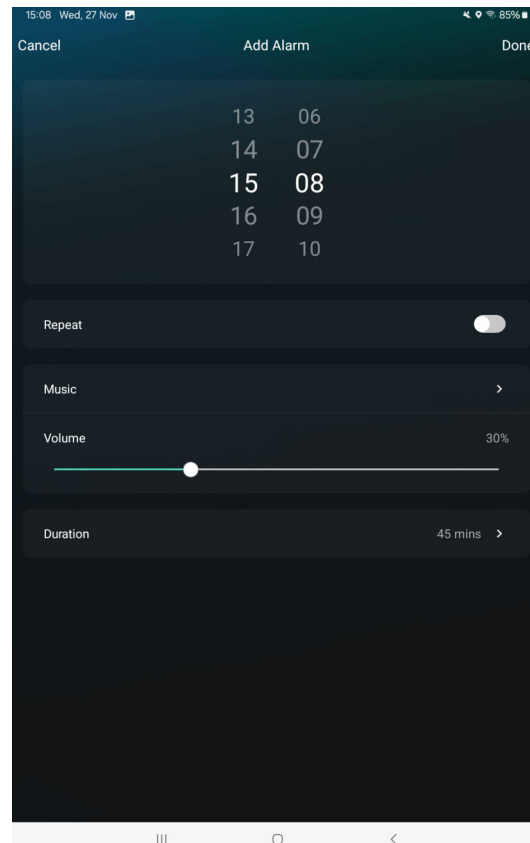

- 02) Set the hours and minutes.
- 03) Press the 'Repeat' button to choose specific days of the week.
- 04) Press 'Music' to select the sound source.
- 05) Set the volume using the slide control.
- 06) Press 'Duration' to set the duration. Press the 'No limit' button for no duration or press 'Duration' to select hours and minutes.


**Note:**

To delete an alarm:

- 1) Swipe left on the alarm to be deleted.
- 2) Press delete.

#### 6.10.2.4.Preset Content

This screen shows the preset content.

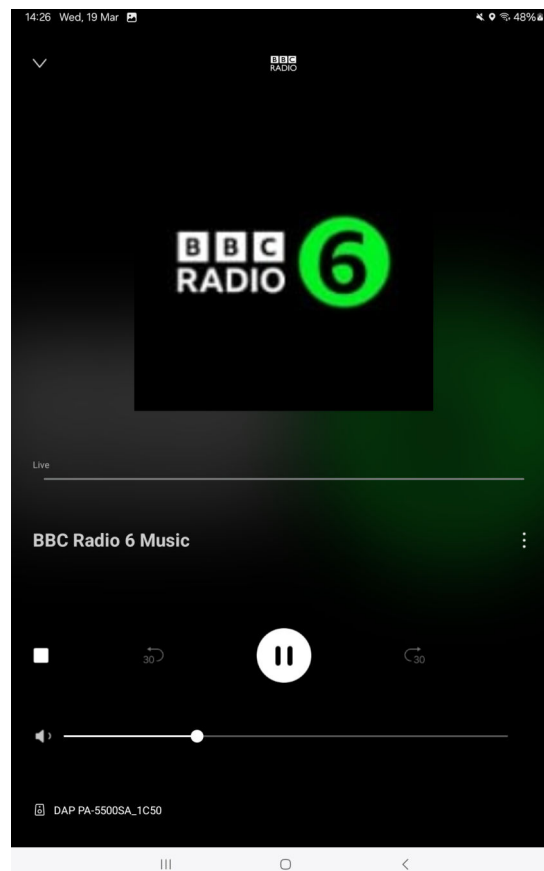

To preset content from any music service that is currently playing:

- 01) Go to the device tab.
- 02) Press on the content in the window.
- 03) Press on the 3 dots.
- 04) Press on 'Preset'.
- 05) Select an empty preset slot.

**Note:**

To delete a preset:

- 01) Open Preset Content.
- 02) Press 'Edit'.
- 03) Select the presets to delete.
- 04) Press the delete symbol.

### 6.10.2.5. Sleep Timer

To set the sleep timer:

- 01) Press the 'Sleep Timer' button.
- 02) Select 10Min, 20Min, 30Min, 60Min or 90Min with the sliding bar.


### 6.10.2.6. Audio Settings

To turn the Fade-In and Fade-Out Effects on and off, press the Fade-In and Fade-Out Effects button.

### 6.10.2.7. EQ

To adjust the EQ:

- 01) Use the Treble slide control to adjust the treble. The adjustment range is -5 to +5 dB.
- 02) Use the Bass slide control to adjust the bass. The adjustment range is -5 to +5 dB.

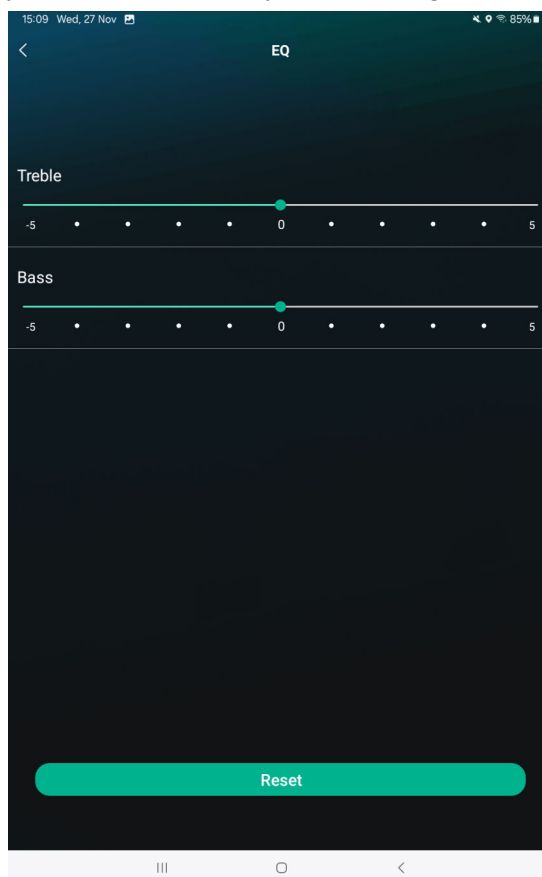

### 6.10.3. 4STREAM App Search Tab

From the search tab, you can search for artists, songs, albums, playlists, stations and shows.


Search by following the steps below:

- 01) Select the category you want to search.
- 02) Enter a search term into the search bar and press enter.

### 6.10.4. 4STREAM App Settings Tab

From the settings tab, you can view the app version and send feedback.

## 6.11. Functions of the Remote Control Buttons

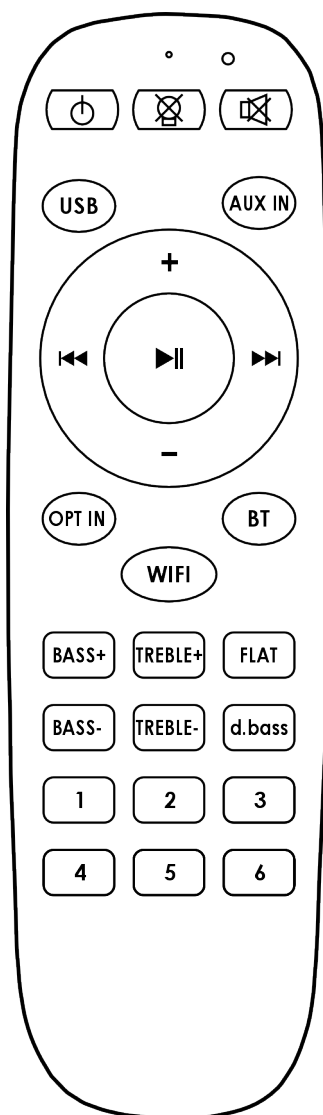

Button	Description	Function
	On/Off	Turns standby mode on/off
	Brightness	Changes the display brightness
	Mute	Turns mute on/off
	USB	Turns USB mode on
	Aux in	Turns audio input mode on
	Volume +	Increases the volume
	Skip backwards	Skips to the beginning of a track or a previous track
	Play/pause	Plays or pauses content
	Skip forwards	Skips to the next track
	Volume -	Decreases the volume
	Opt in	No function
	Bluetooth	Turns Bluetooth mode on
	Wi-Fi	Turns Wi-Fi mode on
	Bass +	Increases the bass
	Treble +	Increases the treble
	Flat	Restores the bass and treble to zero
	Bass -	Decreases the bass
	Treble -	Decreases the treble
	d.bass	No function
	Number buttons	Selects the preset (1 to 6 only)

## 7. Troubleshooting

This troubleshooting guide contains solutions to problems which can be carried out by an ordinary person. The device does not contain user-serviceable parts.

Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.

Refer servicing to instructed or skilled persons. Contact your Highlite International dealer in case the solution is not described in the table.

Problem	Probable cause(s)	Solution
The device does not function	No power to the device	<ul style="list-style-type: none"> <li>Make sure that the power is switched on and the cables are plugged in</li> <li>Make sure that the device is not in standby mode</li> </ul>
	Internal fuse is blown	<ul style="list-style-type: none"> <li>Contact your Highlite International dealer</li> </ul>
No sound	The volume is set to minimum	<ul style="list-style-type: none"> <li>Increase the volume</li> </ul>
The device cannot connect to Wi-Fi	Wi-Fi antenna is not connected	<ul style="list-style-type: none"> <li>Make sure that the supplied Wi-Fi antenna is installed and in a vertical position</li> </ul>
	Wi-Fi network is offline	<ul style="list-style-type: none"> <li>Make sure that the Wi-Fi network is online</li> <li>Make sure that a DHCP server is available</li> <li>Make sure that the static IP address is configured</li> <li>Make sure that the firewall does not block the output ports</li> </ul>
	The router limits access to MAC addresses	<ul style="list-style-type: none"> <li>Make sure that the MAC address (Wi-Fi MAC or LAN MAC in Network Information) is added to the allowlist of your router (AP)</li> </ul>
	Wi-Fi signal is too weak	<ul style="list-style-type: none"> <li>Move the device closer to the router</li> </ul>
	Unsupported encryption method	<ul style="list-style-type: none"> <li>Make sure that the encryption method is set to WEP, WPA or WPA2</li> </ul>
	Incorrect Wi-Fi password	<ul style="list-style-type: none"> <li>Enter the correct Wi-Fi password</li> </ul>
The device cannot connect to Bluetooth	Bluetooth antenna is not connected	<ul style="list-style-type: none"> <li>Make sure that the supplied Bluetooth antenna is installed and in a vertical position</li> </ul>
The device does not respond to the remote control	The remote control is outside of the range of the infrared sensor	<ul style="list-style-type: none"> <li>Make sure that there is a clear line of sight between the remote control and the IR sensor</li> </ul>
	The batteries in the remote control are depleted	<ul style="list-style-type: none"> <li>Change the batteries in the remote control</li> </ul>

## 8. Maintenance

---

### 8.1. Safety Instructions for Maintenance



**DANGER**  
Electric shock caused by dangerous voltage inside

Disconnect power supply before servicing or cleaning.

### 8.2. Preventive Maintenance



**Attention**  
Before use, examine the device visually for any defects.

Make sure that:

- The housing is not damaged.
- The power cable is not damaged and does not show any material fatigue.

#### 8.2.1. Basic Cleaning Instructions

To clean the device, follow the steps below:

- 01) Disconnect the device from the electrical power supply.
- 02) Allow the device to cool down for at least 5 minutes.
- 03) Clean the device with a soft, lint-free cloth.



**Attention**

- Do not immerse the device in liquid.
- Do not use alcohol or solvents.

### 8.3. Corrective Maintenance

The device does not contain user-serviceable parts. Do not open the device and do not modify the device.

Refer repairs and servicing to instructed or skilled persons. Contact your Highlite International dealer for more information.

## 9. Deinstallation, Transportation and Storage

---

- Use the original packaging to transport the device, if possible.
- Clean the device before storing.
- Store the device in the original packaging, if possible.

## 10. Disposal

---

### Correct disposal of this product



### Waste Electrical and Electronic Equipment

This symbol on the product, its packaging or documents indicates that the product shall not be treated as household waste. Dispose of this product by handing it to the respective collection point for recycling of electrical and electronic equipment. This is to avoid environmental damage or personal injury due to uncontrolled waste disposal. For more detailed information about recycling of this product contact the local authorities or the authorized dealer.

## 11. Approval

---



Hereby, Highlite International declares that the device PA-5500SA, product code D6176, is in compliance with Directive 2014/53/EU (RED – Radio Equipment Directive).

The full text of the EU declaration of conformity is available on the respective product page on the website of Highlite International ([www.highlite.com](http://www.highlite.com)).

DAP