



FOS Roller 7R



PRODUCT SPECIFICATIONS

TECHNICAL SPECIFICATION

Voltage: 110/240 Volt AC, 50/60 Hz.

Power Consumption: 230 Watt.

Light Source: 7R 230 Watt lamp.

Effects: Radial beam effects, with different colors & gobos, variable speed of the barrel and Pan / Tilt barrel movement.

Colors: 13 dichroic filters + Open White, with bicolor function and rainbow effect.

Gobos: 14 gobos + Open, with shake and scroll functions.

Control: DMX, Auto & Sound control modes.

DMX Channels: 8.

Protection Class: IP20 (for indoor use only)

Dimensions: 440 x 230 x 280 mm

Weight: 6,9 Kg

SAFETY WARNING

This product must be installed by a qualified professional. All maintenance must be carried out by a qualified electrician. Always disconnect the power before carrying out any maintenance. The earth must always be connected to the ground. Ensure that all parts of the equipment are kept clean and free of dust.



- ✓ The product is designed for indoor use only. Keep it away from water, moisture, extensive heat, humidity and dust. Do not install the product directly on to flammable objects.

- ✓ Always connect the product to nominal voltage and frequency. Do not connect the device to dimmers.

PROTECTION AGAINST SOLIDS AND WATER

Only for IP-rated fixtures

The protection level of a housing is set by applied standards. For classification there is used the IP-Code. It contains the declaration „IP“and two following numbers. The first number characterizes the protection against harmful effects of solids, the second is rating the water protection. It is important to distinguish whether encapsulation and harmful effect! There can be housing that is not capsuled completely but still avoids harmful effect of solids or water.

PROTECTION EXAMPLES:

IP20: Protection against intruding objects >12,5mm „Finger protected “; No waterproofing. **TYPICAL PROTECTION FOR INDOOR USE FIXTURES**

IP33: Protection against intruding objects >2,5mm; Falling water within an angle of 60° has no harmful effect **TYPICAL PROTECTION OF LED-LIGHTS USING RECESSED POWERCON AND DMX SOCKET.** This protection is linked to the mounting position of the fixture and always refers to typical mounting situation like a Floor spot used standing on the ground.

IP54: complete protection against solids and low-pressure water from any side **THIS TYPE OF FIXTURES CAN BE USED UNDER NORMAL OUTDOOR CONDITIONS.**

IP65: shielded against dust and pressurized water from any side. **TYPICAL PROTECTION FOR OUTDOOR RATED EVENTFIXTURES USING WATERPROOFED POWER AND SIGNAL LINK.**

IP67: shielded against dust and protected for accidental briefly submerge. **PROTECTION AGAINST ACCIDENTAL SUBMERGING ON TEMPORARY FLOODED AREA.**

TEMPORARY USE

Event equipment is designed for temporary use. This are typical purpose as concerts, festivals, theatre, clubs and disco use and referable venues. Long-term use, specially under outdoor conditions and fixed outdoor installation can bring damage in aging materials and affect the coated surface. Sealings as well

as cables are made from rubber material and will age by long-term UV-emission as sunlight and should be checked frequently.

LIMITATIONS OF IP PROTECTION

IP-Rating doesn't mean unlimited outdoor use and protection against any kind of environmental influence! Especially sunlight and included UV will bring accelerated aging. Some fixtures need special parts or processes to fit the rated IP-Protection, like mounting covers or caps or similar. Sealings and other plastic or rubber materials are aging parts. They must be checked frequently to ensure the protection and safety of the fixtures. Also specified torque of screws can affect protection!

Warning



NOTE! If the signal cable is over 60 m between the DMX512 controller and fixture or between two fixtures, then a DMX signal amplifier is needed as well.

Menu Screen

You can easily navigate through menu's options with the four buttons under the screen. Navigating in the menu is simple! With the Up / Down buttons, you are moving through menu's choices, pressing Enter, you are entering the sub menu of the option you have chosen, with the Up / Down buttons you're moving through the sub menu's options, with Enter, you are confirming your choice. The **FOS Roller 7R** offers the following options:

Main Menu:

System Setting:

1. **DMX Address**
2. **Lamp Control**
 - On
 - Off
3. **Lamp Power**
 - On
 - Off
4. **No Signal**
 - Auto Program
 - Sound Mode
 - Hold
 - Close Shutter
5. **Pan Reverse**
 - Yes
 - No
6. **Tilt Reverse**
 - Yes
 - No
7. **Mic. Level**
8. **Display Reverse**
 - Yes
 - No
9. **Language**
 - English
 - Chinese
10. **Factory Settings**
 - Yes
 - No

Information

1. **Current Hours**
2. **Life Hours**
3. **Last Run Hours**
4. **Timer Password**
5. **Clear Time**
6. **Temperature**

Reset

1. Reset All
2. Reset Scan
3. Reset Other

Manual Control:

1. **Manual DMX:**
 - Auto Program
 - Pan
 - Tilt
 - Color
 - Gobo
 - Rot. Barrel
 - Strobe
 - Dimmer
2. **Fix Position**
3. **Internal Program:**
 - Alone
 - Master

Channel Modes

8 Channels

1. **Pan**
2. **Tilt**
3. **Barrel Rotation**
 - 0 – 7 No rotation.
 - 8 – 127 CW Rotation from fast to slow.
 - 128 – 135 No rotation.
 - 136 – 255 CCW Rotation from slow to fast.
4. **Color Wheel**
 - 0 – 4 Open White
 - 5 – 9 Red
 - 10 – 14 Red & Orange
 - 15 – 19 Orange

- **20 – 24** Orange & Cyan
- **25 -29** Cyan
- **30 – 34** Cyan & Green
- **35 – 39** Green
- **40 – 44** Green & Light Green
- **45 – 49** Light Green
- **50 – 54** Light Green & Pink
- **55 – 59** Pink
- **60 – 64** Pink & Yellow
- **65 – 69** Yellow
- **70 – 74** Yellow & Magenta
- **75 – 79** Magenta
- **80 – 84** Magenta & Deep Blue
- **85 – 89** Deep Blue
- **90 – 94** Deep Blue & Warm
- **95 – 99** Warm
- **100 – 104** Warm & CTO
- **105 – 109** CTO
- **110 – 114** CTO & CTB
- **115 – 119** CTB
- **120 – 124** CTB & Dewberry
- **125 – 127** Dewberry
- **128 – 189** CW Rainbow from fast to slow
- **190 – 193** Rotation Stops
- **194 – 255** CCW Rainbow from slow to fast

5. Gobo Wheel

- **0 – 7** Open
- **8 – 15** Gobo 1
- **16 – 23** Gobo 2
- **24 – 31** Gobo 3
- **32 – 39** Gobo 4
- **40 – 47** Gobo 5
- **48 – 55** Gobo 6
- **56 – 63** Gobo 7
- **64 – 71** Gobo 8
- **72 – 79** Gobo 9
- **80 – 87** Gobo 10
- **88 – 95** Gobo 11
- **96 – 103** Gobo 12
- **104 – 111** Gobo 13
- **112 – 119** Gobo 14

- **120 – 126** Gobo 1 Shake
- **127 – 133** Gobo 2 Shake
- **134 – 140** Gobo 3 Shake
- **141 – 147** Gobo 4 Shake
- **148 – 154** Gobo 5 Shake
- **155 – 161** Gobo 6 Shake
- **162 – 168** Gobo 7 Shake
- **169 – 175** Gobo 8 Shake
- **176 – 182** Gobo 9 Shake
- **183 – 189** Gobo 10 Shake
- **190 – 196** Gobo 11 Shake
- **197 – 203** Gobo 12 Shake
- **204 – 210** Gobo 13 Shake
- **211 – 217** Gobo 14 Shake
- **218 – 255** CW Rotation

6. Shutter

- **0 – 127** Shutter closed
- **128 – 191** Strobe Effect from slow to fast
- **192 – 255** Shutter Open

7. Dimmer

8. Functions

- **0 – 15** No function
- **16 – 31** Lamp On
- **32 – 47** Lamp Off
- **48 – 63** All motor reset
- **64 – 79** Mirror motors reset
- **80 – 95** Wheels motor reset
- **96 – 111** Linear color change
- **112 – 127** Linear gobo change
- **128 – 143** Program 1
- **144 – 159** Program 2
- **160 – 175** Program 3
- **176 – 191** Program 4
- **192 – 207** Program 5
- **208 – 223** Program 6
- **224 – 239** Program 7
- **240 – 255** No function

General Information

Replacing a fuse:

Always disconnect the fixture from main power before replacing a fuse. Use only the appropriate fuse, with the same type and rating. A fuse with different rating, can damage the fixture in case of failure.

Risk of electric shock and / or fire:

The fixture must be earthed, supplied always with its nominal voltage and cleaned periodically from dust. For cleaning use only, a moist cloth. Never use liquids or force water. After cleaning, let the fixture dry before use.